


Headlights



- 1 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.

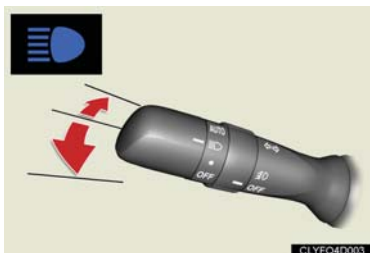

To engage the high beams, push the lever forward. To flash the high beams temporarily, pull the lever toward you.

■ AFS (Adaptive Front-lighting System)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



To cancel the system, press the "AFS OFF" button. The indicator comes on when the system is off.

Press the button again to reactivate the AFS.

Fog Lights



The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washer

Intermittent wiper with interval adjuster (if equipped)



- 1 Intermittent operation
- 2 Low speed
- 3 High speed
- 4 Single wipe
- 5 Wash and wipe




When the wipers are set to intermittent operation, wiper interval can be adjusted by turning the band.

- 1 Increases the interval
- 2 Decreases the interval

■ Rain-sensing windshield wipers (if equipped)



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Single wipe
- 5 Wash and wipe

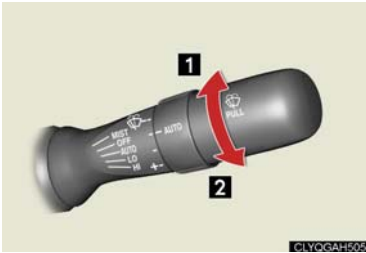

When the wipers are set to automatic operation, sensor sensitivity can be adjusted by turning the band.

- 1 Decreases the sensitivity (-)
- 2 Increase the sensitivity (+)

Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the "ENGINE START STOP" switch is in IGNITION ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and the outside rear view mirrors, press the button.


Press again to cancel.



To defog the rear window and the outside rear view mirrors, press the button.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control

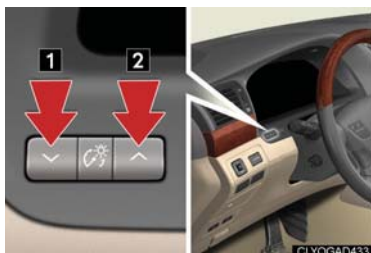

1 To dim: press "V".

2 To brighten: press "^".